

Ademco 4110 XMP / First Alert 120 C

Zones - 6 Hardwired, 14 if using 4219 Zone Expander, up to 16 Wireless with 4281 Receiver

Battery - 12 volt rechargeable Gel-Cell inside main panel  
AC Transformer is 16.5 volts, screwed into outlet somewhere in house

Wireless - 5700 series Wireless  
all use 9-volt Alkaline

Downloadable - Yes

Panic Buttons - Police Panic - \* and #  
Medical Panic - 1 and \*  
Fire Panic - 3 and #

Status - Press \* if keypad shows NOT READY to view open zones

Arm AWAY - 4-digit code + 2 (AWAY)

Arm STAY - 4-digit code + 3 (STAY)

Instant Arm - 4 digit code + 7 (INSTANT)

Max Arming - 4-digit code + 4 (MAX), arms everything including motions instant

Quick-Arm (If Enabled) Press # + 2 for AWAY, # + 3 for STAY

Disarm - 4 digit code + 1 (OFF)

Silence Alarm - 4 digit code + 1 (OFF) twice to turn off siren and reset display

Bypass - 4-digit code + 6 (BYPASS) + zone (01, 02 etc), BYPASS and zone should display

Alarm Memory Last alarms only shows until system disarmed for the second time

Test Sensors - 4-Digit Code + 5 (TEST)

Keypad will beep every 3 minutes

Open sensors and keypad will sound

End test with 4-digit Code + 1 (OFF) key

(Wireless motions require no movement for 4 minutes prior to testing)

Reset Smoke - 4-digit code + 1 (OFF) twice to turn off siren and reset smoke

(If this does NOT reset smoke detector set for service, smoke is bad)

Door Chimes - 4-digit code + 9 (CHIME) CHIME should appear on keypad display

Pager Signals - Only available on really new 4110DL and 4110XM's

Alarms Account + 1911 + 3 digit Zone

Openings Account + 1001 + 3 digit User

Closings Account + 1002 + 3 digit User

Trouble Account + 1811 + 3 digit Zone